


CONVERTIBLE PAN HALF REPLACEMENT MADE EASY

◀73

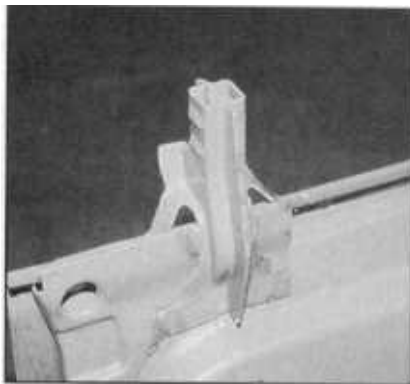

- 14** Take your new pan half and remove the jack support. These are heavily spot-welded to the floor, so take a spot-weld drill bit and drill out the spot welds. Be careful not to bend or rip up the new floorpan when removing this piece.



- 15** Next, take your disc sander and clean the paint off the lip of the floor pan (top and bottom). This ensures a clean area for a strong weld. Then place the floor section onto the pan.

76▶